


The 4-Button C14 System:

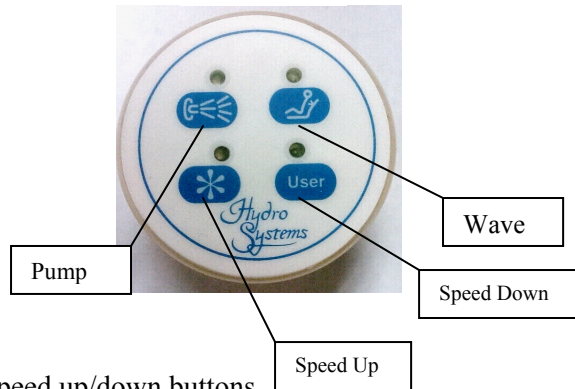

Control Features:

- Variable Speed Pump using speed up/down buttons
- Water sensor control
- Independent button control for Wave mode activation
- Automatic 30-minute run-timer for pump

The Water Sensor:

The water sensor device must detect water feedback in order for the pump to be able to operate.

The Automatic 30-Minute Run-Timer:

Once the system motor has been activated, an automatic timer is set to 30-minutes. The system will stay in operation until the run-timer expires, at which time all functions will shut down. The light device timer runs independent of the main system run-timer.

Variable Speed Pump Operation using the +/- keys:

Once the pump has been turned on, a press and hold of button 1 will illuminate the lower 2 LEDs of the display indicating that the speed Up/Down buttons are available for speed adjustment. The buttons will stay illuminated for 10 seconds of no button pressing. A press and release of the button 1 will shut the motor down. To enter the 'Wave' mode, press and hold the speed down button (once speed control is gained) until the button LED blinks to indicate the Wave mode has been entered.

Wave Mode Activation:

The pump motor must first be activated in order to select the 'WAVE' mode feature. To activate the 'WAVE' mode, press and release button number 2. To deactivate the 'WAVE' mode, press and release button 2 a second time and the motor will remain on the current speed.