




4 Button Operations

4-Button 8800 Thermal AirTub Only: Variable Speed Blower

Control Features:

- Variable Speed Blower using speed up/down buttons
- Independent button control for Wave and Pulse modes
- Automatic 30-minute run-timer for blower
- Purge Clean Cycle

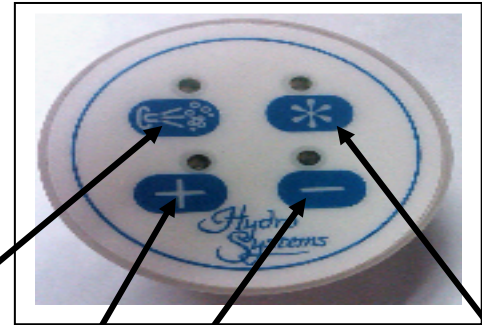

1A.) Start / Blower

2A.) Wave & Pulse Button

3A.) Increase Speed

4A.) Decrease Speed

Powering the system up:

By pressing the blower icon once, **(1A)** the system will power up and be ready for use.

Blower Motor Control using the +/- keys:

Once the blower has been turned on by using this function, pressing the blower button for two to three seconds will illuminate the lower +/- LEDs of the display indicating that the speed Up/Down buttons are available for blower speed adjustment **(3A and 4A)**. The buttons will stay illuminated for 10 seconds, then turn off if no button is pressed. A press and release of Blower button **(1A)** will shut the blower down.

Wave and Pulse Mode Activation:

The blower motor must first be activated in order to select the 'WAVE' and 'PULSE' mode feature. To activate the 'WAVE' mode, press and release button **(2A)**. To activate the 'PULSE' mode, press and release button **(2A)** a second time. To deactivate the 'PULSE' mode, press and release button **(2A)** a third time and the motor will remain running on the current speed.

The Automatic 30-Minute Run-Timer:

Once the system motor has been activated, an automatic timer is set to 30-minutes. The system will stay in operation until the run-timer expires, at which time all functions will shut down. The light device timer runs independent of the main system run-timer.

The Purge Clean Cycle:

A system fitted with a blower automatically contains the purge clean cycle feature. 15 minutes after the blower is turned off and no water is in the tub, the blower will activate for 2 to 5 minutes to remove any standing water and to ensure that the pipes are adequately cleared of moisture.