




MAESTRO REMOTE BLOWER INSTALLATION

Remote Blower Installation




Locate the blower connection and wiring under the tub. A cut out in the flooring will be necessary to allow the connection of the air piping as well as the wire routing.

Remote Blower Installation

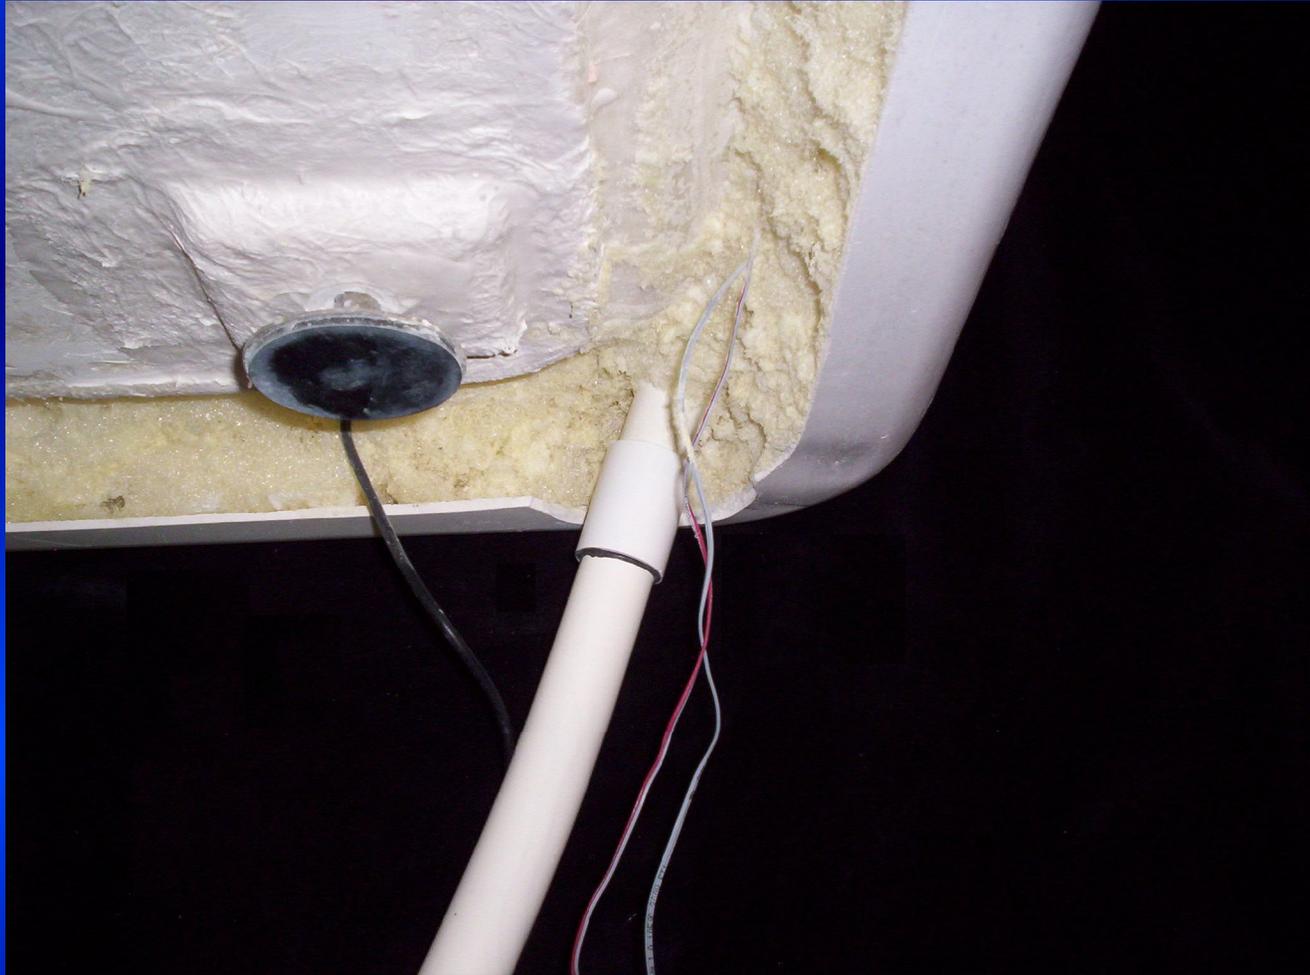


Supplied plumbing connects to the pipe on the underside of the tub. Additional piping or connectors may be necessary depending upon the flooring situation

Remote Blower Installation

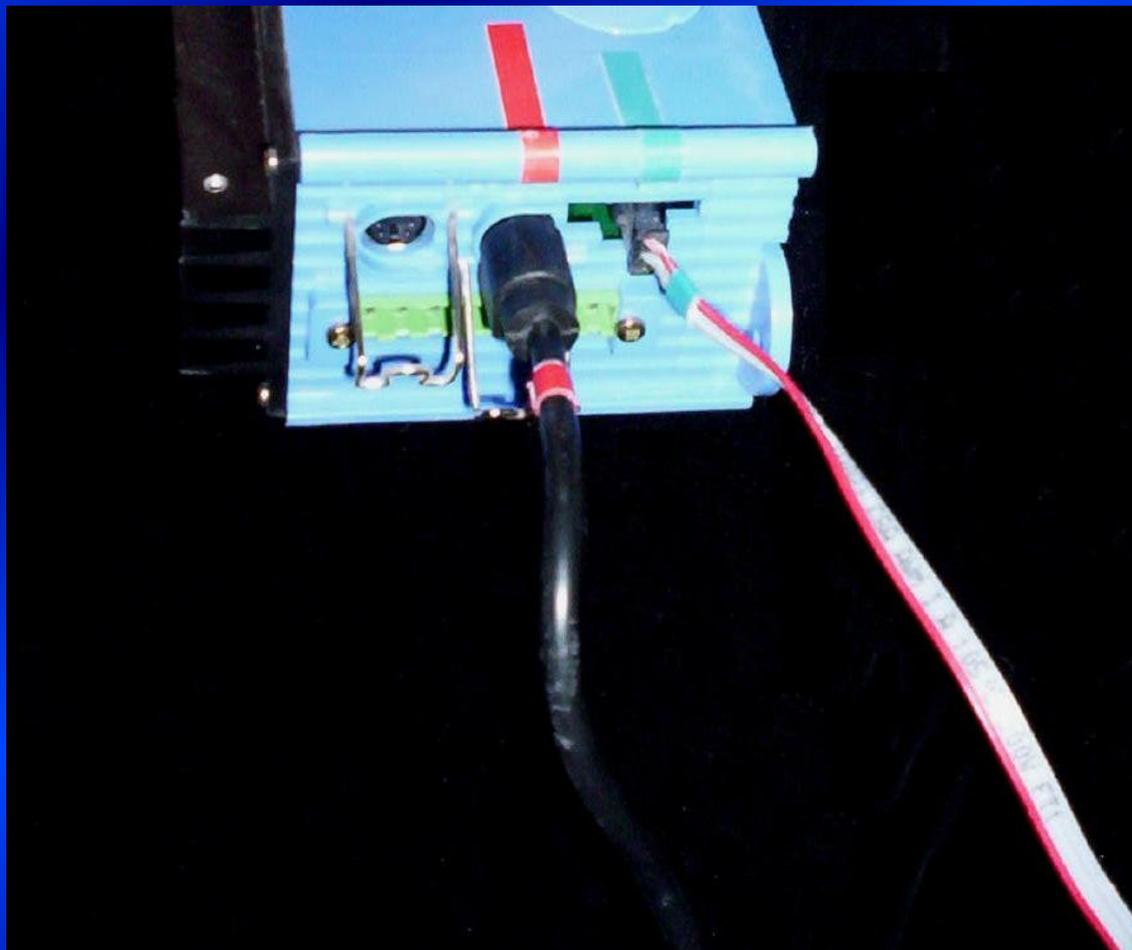


Remote wires will plug in to the control box.

Remote Blower Installation

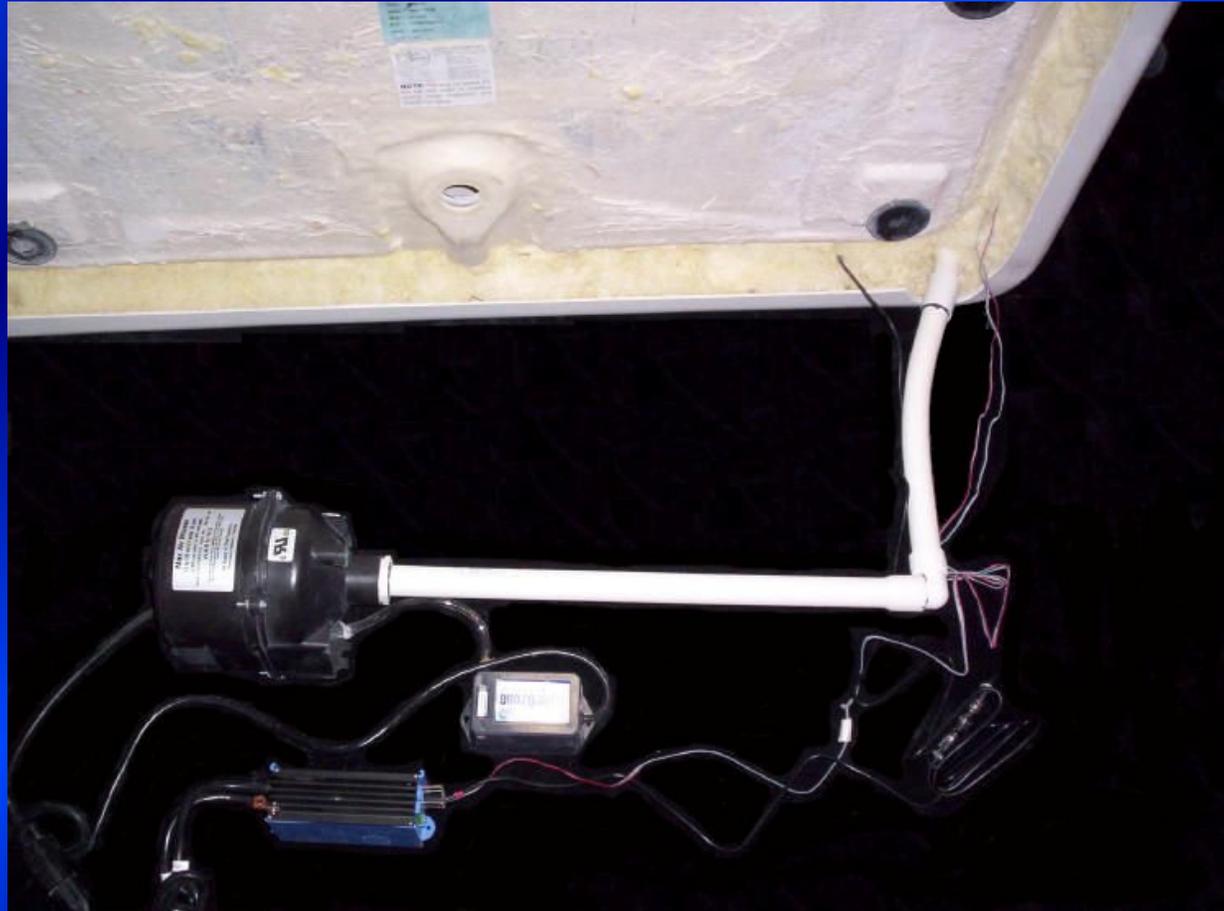


The blower motor will be installed in the remote location. On most units the check valve is installed within the skirting of the tub. If supplied with the blower motor, it needs to be mounted between the blower and tub. The blower motor plugs in to the control box, as does the remote wire. The control box plugs in to the 120 volt power supply.

Remote Blower Installation

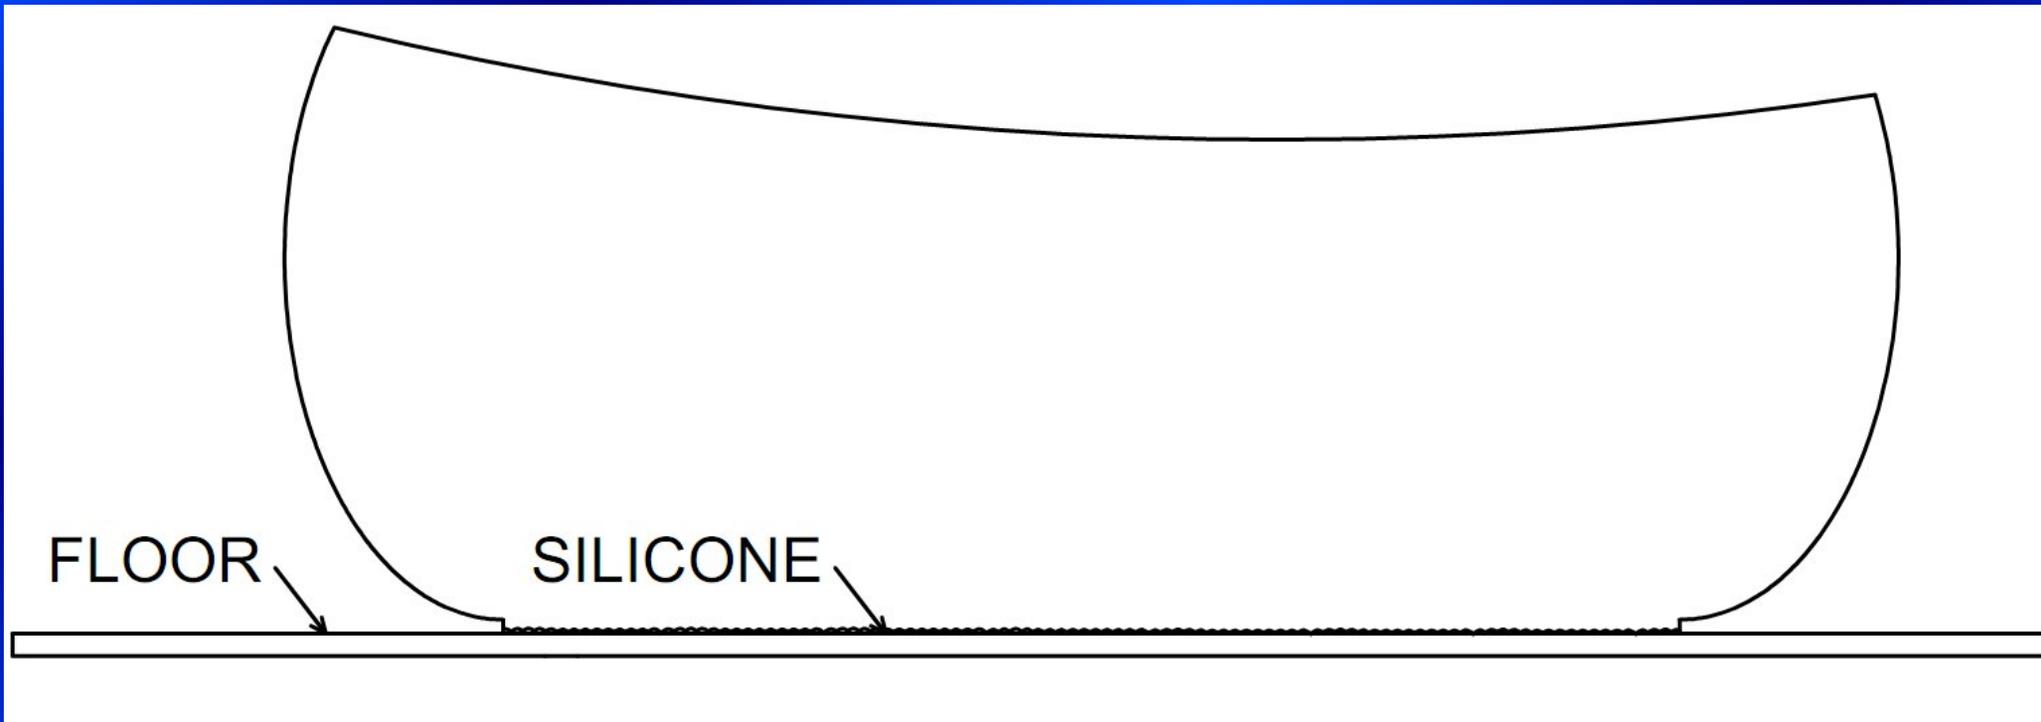

Application of silicone is recommended between the tub and floor. This will help to stabilize the tub in position when it is empty.

Remote Blower Installation

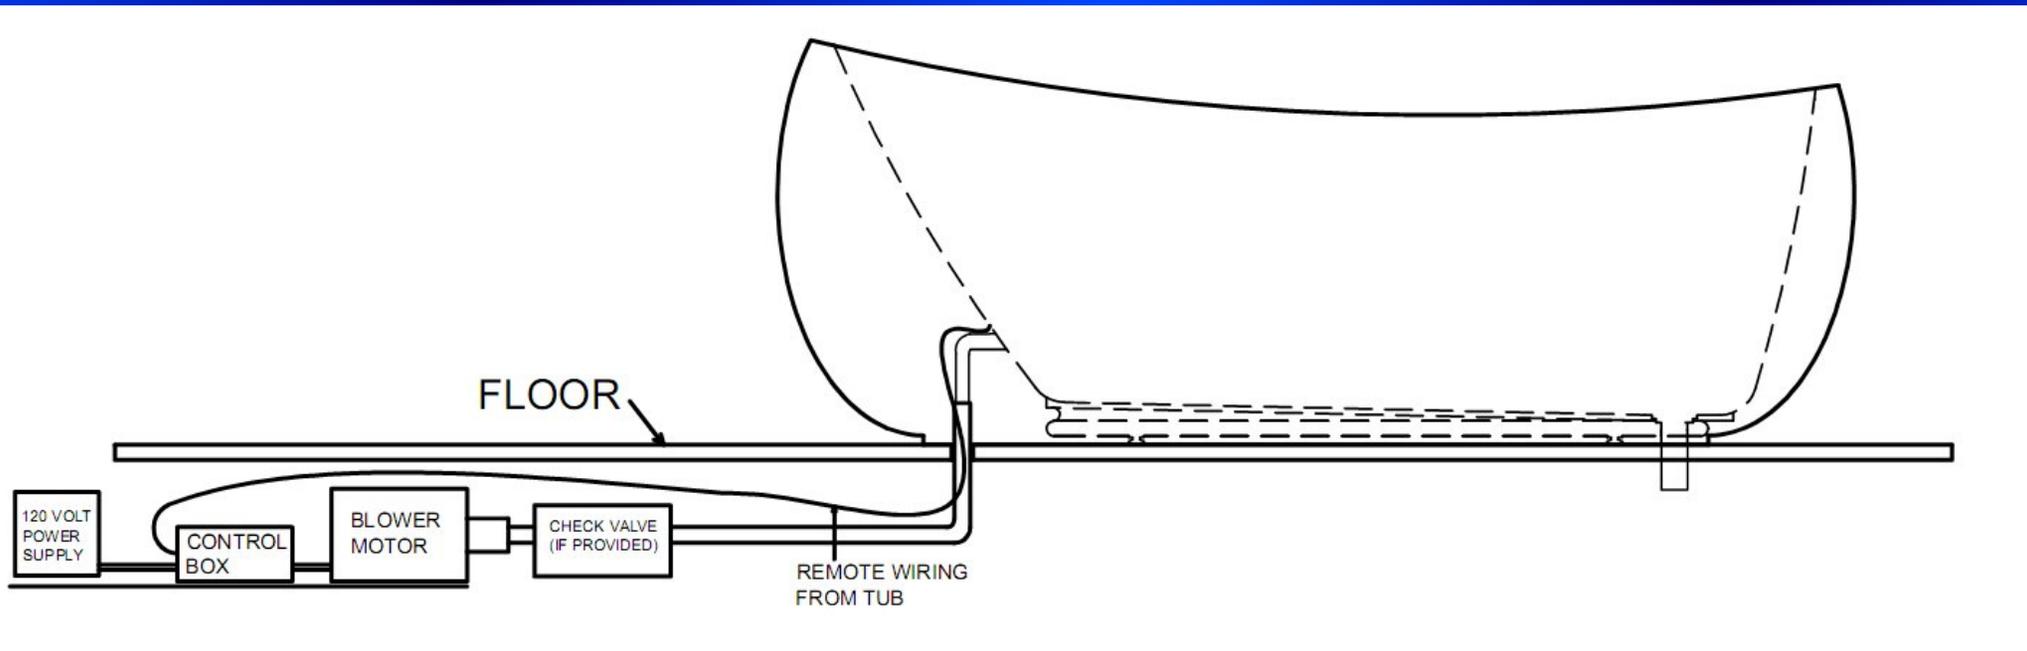

This drawing depicts an installation. Others will vary in distance and location.

Remote Blower Installation



This photograph illustrates a text book set-up. Note the pre-plumbed drain, piping and wiring. The wires were fed through a PVC pipe for protection as well as ease of installation.

Remote Blower Installation



The tub has been installed in position.

Remote Blower Installation



The tub has been attached to the floor with silicone. This will ensure that there is no movement of the tub when it is without water.