


TWO BUTTON CONTROL WITH LCD OPERATING INSTRUCTIONS

Your whirlpool bathtub has been equipped with Electronic Controls to provide features that allow you to customize your bathing experience to your individual preference. Please familiarize yourself with the features and operating instructions below in order to maximize the enjoyment you receive from your bath. These operating instructions should be used in conjunction with the other instructions and warnings provided with your whirlpool bathtub in order to fully understand and safely utilize the bathtub.

Control Features: Pump, Light

TABLE OF CONTENTS

1. OPERATING INSTRUCTIONS
 - MAIN MENU
 - PUMP FUNCTIONS
 - LIGHT FUNCTIONS
 - TEMP SETTINGS
 - TIMER SETTINGS
2. TROUBLESHOOTING & FAQ

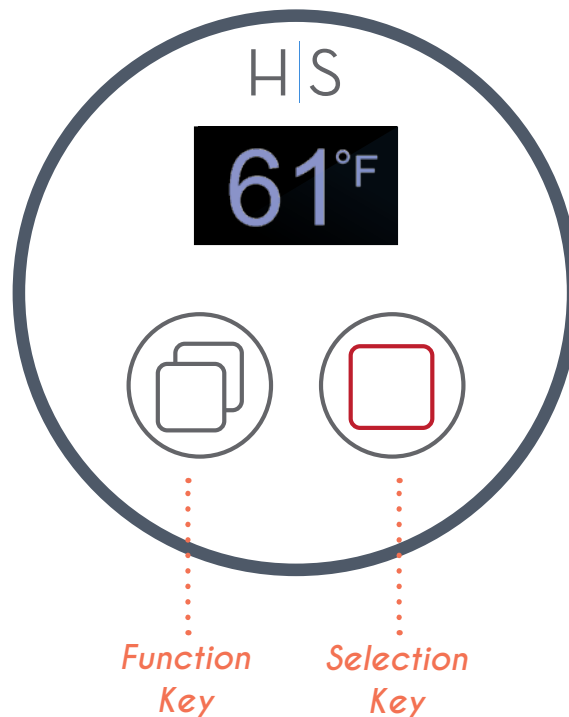


PROGRAM 1
26410-000-100
26410-002-110
26410-000-110
26410-002-100

1. OPERATING INSTRUCTIONS



FUNCTION KEY

- Cycle between Sub-Menus

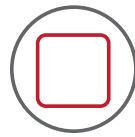

SELECTION KEY

- Power On/OFF
- Toggle Options in Sub-Menus

1. Power On (Activate System)

- Press and hold Selection Key to power up controller and activate the system. Display will cycle through Temp and Water Level at startup.

NOTE: If water level is too low, system will not activate and display will show "low water level" icon.

- Press and hold Selection Key once to power OFF.

LCD DISPLAY: POWER ON



WATER LEVEL



TEMP

2. Pump Functions

- Press the Function Key to cycle to Pump menu.
- Press the Selection Key to toggle Pump ON/OFF.

LCD DISPLAY: PUMP



2-A



2-B

3. Light Functions

- Press the Function Key to cycle to Light menu.
- Press the Selection Key to cycle Light ON beginning with color "1."
- Press the Selection Key to cycle through color options. The menu will cycle through eight settings.
- Each number 1 - 7 corresponds to a light color setting.
- The check mark (setting #8) corresponds to a color show mode that cycles through each color every three seconds.
- Press and hold the Selection Key while in the Light menu to cycle OFF.

LCD DISPLAY: LIGHT



3-A



3-B



3-E

- 1 = WHITE
- 2 = LT BLUE
- 3 = YELLOW
- 4 = GREEN
- 5 = PURPLE
- 6 = DK BLUE
- 7 = RED
- ☑ = 3 SEC CYCLE

4. Temperature Settings

- To change temp from °C to °F, press and hold the Function Key.

LCD DISPLAY: TEMPERATURE



4-A



4-A

5. Timer Functions

- Press the Function Key to cycle to the Timer menu.
- Press the Selection Key to cycle ON. The Timer default is 20 minute and can be adjusted up to 60 minutes in five minute increments.

LCD DISPLAY: TIMER



5-A, B



5-B

2. FAQ & TROUBLESHOOTING

1. **LOW WATER LEVEL / NO WATER**
If water level is too low, system will not activate and display will show "low water level" icon.
2. **"TOO HOT" ERROR**
If water temp exceeds 111°F the screen will display the message "Too Hot" and the system will shut down completely. When the temperature drops below 111°F the system can be activated.
3. **LIGHT DOES NOT TURN ON**
If the light will not turn on, there may be a bad connection or defective light. Contact technical support.
4. **PUMP DOES NOT TURN ON**
 - a. Check water level.
 - b. Pump will not engage without a sufficient water level.
5. **SYSTEM TURNS OFF DURING USE**
 - a. Check timer settings. Default system timer is 20 minutes.
 - b. Check for loss of power



LOW WATER /
NO WATER



TEMP OVER 111°F

