

 
## BATH CONTROL SYSTEM OPERATING INSTRUCTIONS

Your Air Bathtub has been equipped with Electronic Controls to provide features that allow you to customize your bathing experience to your individual preference. Please familiarize yourself with the features and operating instructions below in order to maximize the enjoyment you receive from your bath. These operating instructions should be used in conjunction with the other instructions and warnings provided with your whirlpool bathtub in order to fully understand and safely utilize the bathtub.

### TABLE OF CONTENTS

1. OPERATING INSTRUCTIONS
2. TROUBLESHOOTING & FAQ

## CONTROL PAD LAYOUT

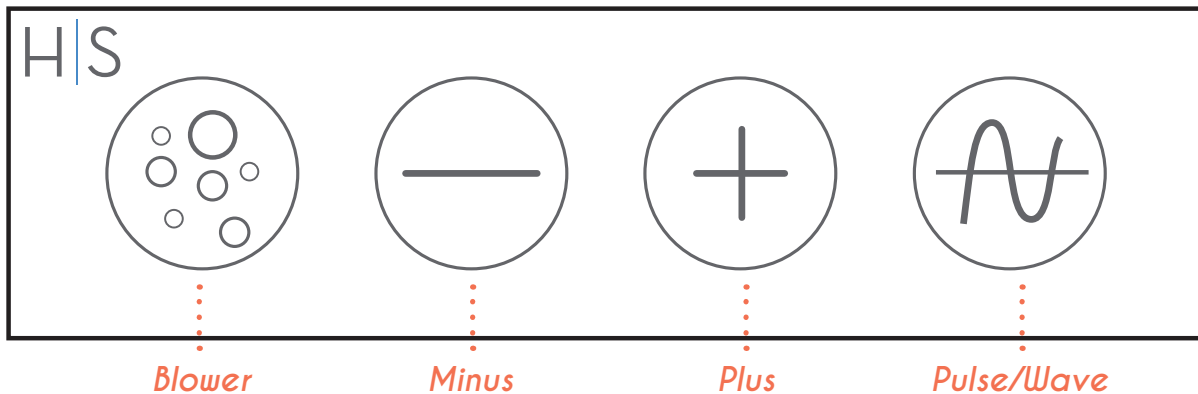


Instructions for Controller Heads:

- 26400-100-103
- 26400-102-113
- 26400-100-113
- 26400-102-103

# 1. OPERATING INSTRUCTIONS
 
## 1. Blower

- a. Press and hold Blower button for ~2 seconds to turn ON. The Blower will start on the highest fixed blower speed setting of "6".
- b. To adjust the "fixed" blower speed setting, tap the Plus or Minus buttons. The Blower has six fixed speeds that can be adjusted from "6" to "1".
- c. Press and hold to turn Blower OFF.

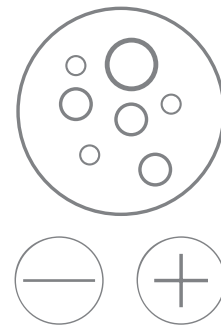

## 2. Pulse/Wave

- a. With Blower on, tap Wave/Pulse button to turn ON Wave
- b. Tap again to switch to Pulse.
- c. Tap again to switch back to Wave.
- d. To exit Pulse/Wave, tap Blower button once to resume Speed 6, or press and hold Blower button to turn OFF.



## 3. Automatic Purge/Clean Cycle

Any system fitted with a blower automatically contains the Purge/Clean cycle feature. 15 minutes after the blower is turned off using the Non-LCD control pad the blower will activate for 3 minutes. During the blower Purge/Clean cycle the Non-LCD control heads will light up the Blower Icon indicating the cycle is active. When the system is in the purge/clean cycle the cycle cannot be stopped by pressing any buttons on the control head.

# 2. FAQ & TROUBLESHOOTING

## 1. What do I do if the Blower does not turn on?

- a. Check electrical connections to the Blower.

## 2. Blower turns on by itself?

- a. Check to see if the blower is in the purge cycle (Blower light is lit and the blower cannot be turned off by pressing any buttons).
- b. After 3 minutes does the Blower turn off, if so the blower is in the Purge/Clean Cycle

For all other technical issues please contact Hydro Systems technical support through our website <https://hydrosystem.com> or by phone at 661-775-0686.