


FOUR BUTTON CONTROL WITH LCD OPERATION INSTRUCTIONS

Your whirlpool bathtub has been equipped with Electronic Controls to provide features that allow you to customize your bathing experience to your individual preference. Please familiarize yourself with the features and operating instructions below in order to maximize the enjoyment you receive from your bath. These operating instructions should be used in conjunction with the other instructions and warnings provided with your whirlpool bathtub in order to fully understand and safely utilize the bathtub.

TABLE OF CONTENTS

1. OPERATING INSTRUCTIONS
2. TROUBLESHOOTING & FAQ

CONTROL PAD LAYOUT

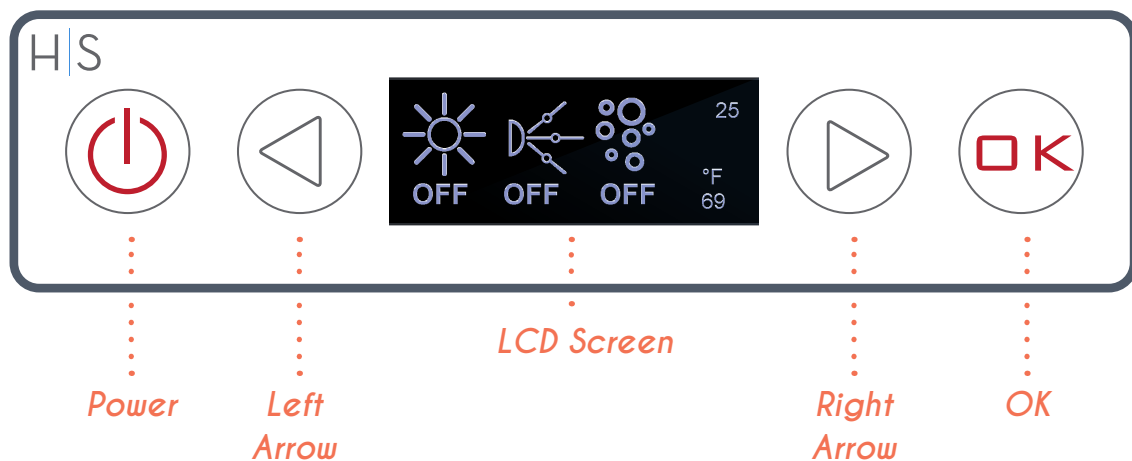

1. OPERATION INSTRUCTIONS



POWER KEY

- Power On/OFF
- Cycle between Sub-Menus



"OK" KEY

- Cycle Sub-Menu Settings and Options




ARROW KEYS

- Move between Sub-Menus Selections

1. Power On / Main Menu

- Press and Hold Power Key to power up controller and activate the system. Program setting will appear two sec for reference. **NOTE:** If water level is too low, system will not activate and display will show temporarily display "No H2O."
- Main screen will display current active settings
- Press and Hold Power Key to power system OFF.

LCD DISPLAY: MAIN MENU

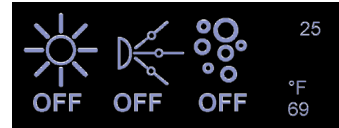

2. Light Functions

- Tap the Power Key to cycle to Light menu.
- Tap the "OK" Key to toggle Light ON.
- Use arrow keys to select light color menu
- Tap "OK" to cycle light colors.
- To turn lights OFF, tap arrow keys to select "ON. Tap "OK" key to turn lights OFF.

LCD DISPLAY: LIGHT



2-B



2-C,D

3. Pump Functions

- Tap the Power Key to cycle to Pump menu.
- Tap the "OK" Key to toggle pump ON/OFF.
- Tap RIGHT arrow to select available jet settings. Tap LEFT arrow to select a different seat or zone (if available).
- Tap "OK" to cycle through settings of selected jets:
 - 0 = OFF
 - 1 = Constant ON (NOTE: For waterfall only 0 or 1 are available)
 - 2 = 0.5 second jet sequence pattern
 - 3 = 1.0 second jet sequence pattern
 - 4 = 1.5 second jet sequence pattern
- To turn OFF, tap arrow keys to select "ON. Tap "OK" key to turn OFF.

LCD DISPLAY: PUMP



3-B



3-C,D

4. Blower Functions

- Tap the Power Key to cycle to the Blower menu.
- Tap the "OK" Key button to toggle ON. The blower will start on the highest fixed blower speed setting of "6".
- Use arrow keys to select blower speed settings. To adjust the "fixed" blower setting Tap "OK" Key. The blower has six fixed speeds that can be adjusted from "6" to "1".

LCD DISPLAY: BLOWER



4-B



4-C

- d. Use arrow keys to select blower mode settings. The blower defaults to the "fixed" setting. Tap "OK" to cycle between Wave, Pulse and Fixed.
- e. To turn blower OFF, tap arrow keys to select "ON. Tap "OK" key to turn blower OFF.

LCD DISPLAY: BLOWER




4-D

5. Timer Settings

- a. Tap the Power Key to cycle to the Timer menu.
- b. Use arrow keys to adjust system off timer. The timer can be adjusted preset increments between 5 and 60 minutes.

LCD DISPLAY: TIMER

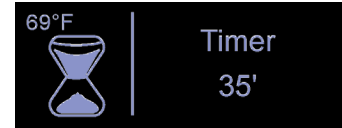

5-B

2. FAQ & TROUBLESHOOTING

1. **LOW WATER LEVEL / NO WATER**
If water level is too low, system will not activate and display will show "low water level" icon.
2. **CHECK PROGRAM SETTINGS**
To check the current control program, power ON. The current control program will be displayed on the screen.
3. **"TOO HOT" ERROR**
If water temp exceeds 111°F the screen will display the message "Too Hot" and the system will shut down completely.
4. **E1 ERROR**
The "E1" error code indicates that the temp probe is missing or disconnected.



2. FAQ & TROUBLESHOOTING

5. LIGHT DOES NOT TURN ON

If the light will not turn on, there may be a bad connection or defective light. Contact technical support.

6. AUTOMATIC CLEANING CYCLE

After water is drained from the tub, an automatic cleaning cycle activates system blower (if equipped). The blower should automatically de-activate after approximately two minutes.

7. PUMP DOES NOT TURN ON

- a. Check water level.
- b. Pump will not engage without a sufficient water level.

8. BLOWER DOES NOT TURN ON

Check electrical connections to the Blower.

9. SYSTEM TURNS OFF DURING USE

- a. Check timer settings. Default system timer is 20 minutes.
- b. Check for loss of power

For all other technical issues please contact Hydro Systems technical support through our website <https://hydrosystem.com> or by phone at 661-775-0686.