


FOUR BUTTON CONTROL WITH LCD OPERATION INSTRUCTIONS

Your whirlpool bathtub has been equipped with Electronic Controls to provide features that allow you to customize your bathing experience to your individual preference. Please familiarize yourself with the features and operating instructions below in order to maximize the enjoyment you receive from your bath. These operating instructions should be used in conjunction with the other instructions and warnings provided with your whirlpool bathtub in order to fully understand and safely utilize the bathtub.

TABLE OF CONTENTS

- 1. OPERATING INSTRUCTIONS
- 2. TROUBLESHOOTING & FAQ

 CONTROL PAD LAYOUT

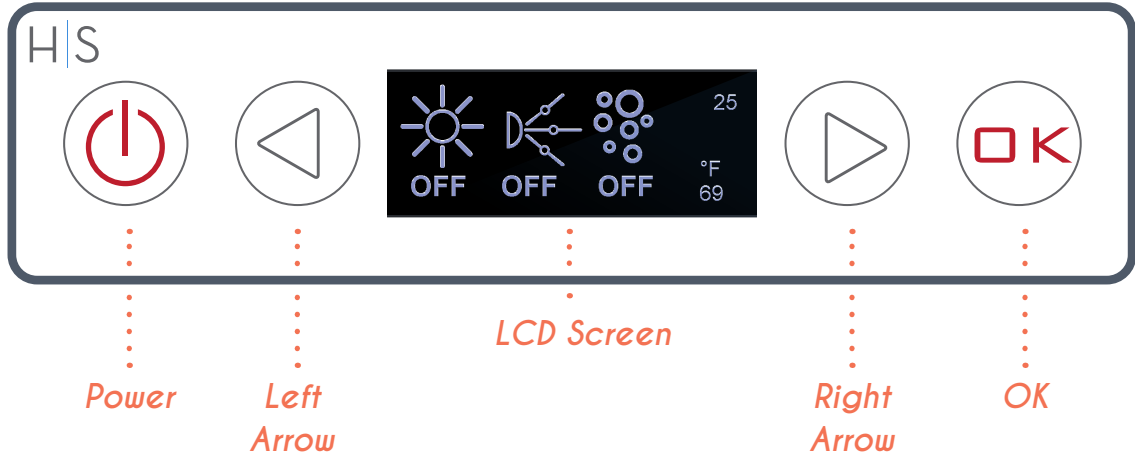

1. OPERATION INSTRUCTIONS



POWER KEY

- Power On/OFF
- Cycle between Sub-Menus



"OK" KEY

- Cycle Sub-Menu Settings and Options




ARROW KEYS

- Move between Sub-Menus Selections

1. Power On / Main Menu

- Press and Hold Power Key to power up controller and activate the system. Program setting will appear two sec for reference. **NOTE:** If water level is too low, system will not activate and display will show temporarily display "No H2O."
- Main screen will display current active settings
- Press and Hold Power Key to power system OFF.


LCD DISPLAY: MAIN MENU

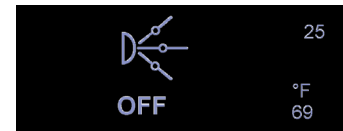


2. Pump Functions

- Tap the Power Key to cycle to Pump menu.
- Tap the "OK" Key to toggle Pump 1 or Pump 2 ON/OFF.
- Tap RIGHT arrow to select pump 1. Tap RIGHT arrow to select to select pump 2.

LCD DISPLAY: PUMP

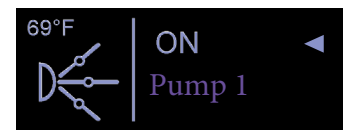


3-B

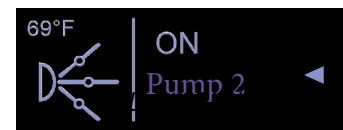

3. Timer Settings

- Tap the Power Key to cycle to the Timer menu.
- Use arrow keys to adjust system off timer. The timer can be adjusted preset increments between 5 and 60 minutes.

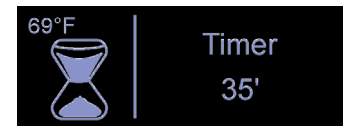

2. FAQ & TROUBLESHOOTING

1. LOW WATER LEVEL / NO WATER
If water level is too low, system will not activate and display will show "low water level" icon.

NO H₂O

2. CHECK PROGRAM SETTINGS
To check the current control program, power ON. The current control program will be displayed on the screen.

3201-16

3. "TOO HOT" ERROR
If water temp exceeds 111°F the screen will display the message "Too Hot" and the system will shut down completely.

Too Hot

4. PUMP DOES NOT TURN ON
 - a. Check water level.
 - b. Pump will not engage without a sufficient water level.

For all other technical issues please contact Hydro Systems technical support through our website <https://hydrosystem.com> or by phone at 661-775-0686.