


## THERMAL AIR (AST CONTROL BOX) WITH AIR SWITCH

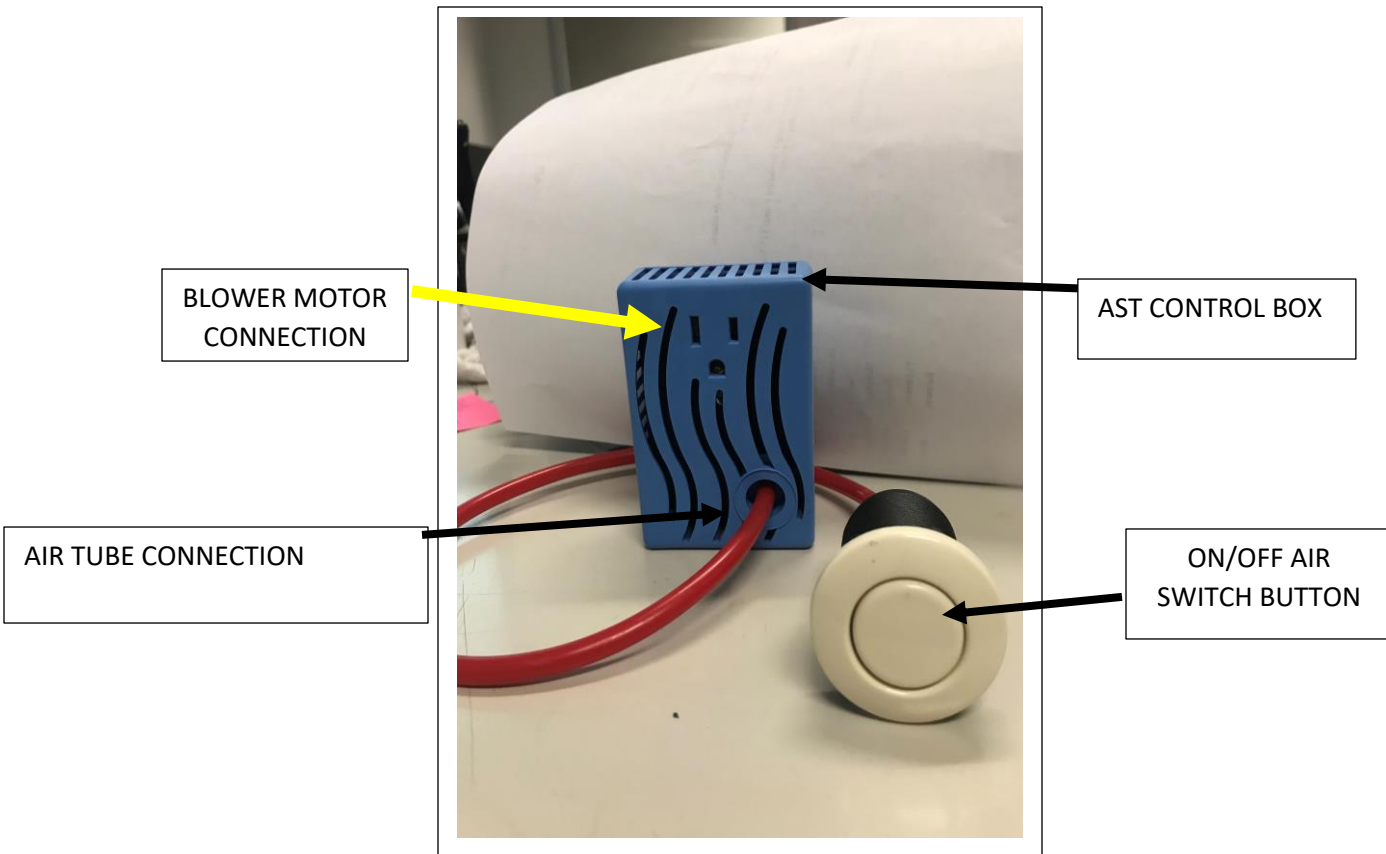

### Operation Instructions:

**Step 1.** Turn the blower on by pressing then releasing the ON/OFF switch. Turn the blower off by pressing then releasing the ON/OFF switch or wait until it shuts off automatically after 20 minutes.

**Step 2.** To change the speed of the blower, press and hold the ON/OFF switch until the desired speed is reached, then release the switch.

**Step 3.** To activate massage mode, press and hold the ON/OFF switch until the speed decreases then begins to increase again, then release the switch.

To deactivate massage mode, press and release the ON/OFF switch (this turns the blower off).

**Purge Cycle:** 20 minutes after the system has shut off the blower will come on for about 3 minutes will purge the remaining water from the air channel then the system will shut off.

# THERMAL AIR (AST CONTROL BOX) WITH AIR SWITCH

## Troubleshooting Guide

<b><u>Problem</u></b>	<b><u>Probable Cause</u></b>	<b><u>Corrective Action</u></b>
Blower does not start	Defective ON/OFF switch.	Disconnect the hose from ON/OFF switch. Using your finger, plug the hole on the bottom of the switch where the tubing was connected. Press the switch button. If you feel any resistance while pressing the air switch, the switch it is not defective.
	Damaged/pinched hose.	Visually inspect the tubing for kinks or cuts. Replace if necessary.
	No power.	Plug a light into wall socket to test.
Blower does not change speed	Defective AST.	Plug a light into AST and use the ON/OFF switch to turn on the light.
	A single-speed pump/blower is used with your model of jetted bath.	Verify the control options available with your model of jetted bath. See "Operation".
Blower does not stop or runs for short periods of time	AST or motor may be overheated.	Ensure there is ample ventilation in and around the blower and AST units.