

Hydro Systems Pump + Light Operation

TURNING JET PUMP ON

- Press the On/Off jet pump button to start the jet pump
- The jet pump is set to run automatically for 30 minutes
- The built-in timer will turn off the jet pump unless it has been manually turned off first

TURNING LED LIGHTS ON (Optional)

- Press the light icon button to start the LED lights by pressing the lights ON
- To select a desired color press ON/OFF for 4 seconds to select a desired color
- After 30 minutes, LED lights turn OFF unless it has been turned off manually

TROUBLE SHOOTING

If jet pump does not activate, perform the following tests:

POWER/OUTLET CHECK



- Check pump jumper
- Test outlet with lamp or electrical device
- Check GFCI breaker or reset breaker

BY-PASS CONTROLLER CHECK

- Plug jet pump directly into a working outlet
- If equipment runs, proceed to Bath Controller Check
- If pump or blower does not run, contact customer support

BATH CONTROLLER CHECK

- Check or test outlet (as above)
- Check panel cable for proper connection
- If pump or blower operates when directly powered, contact customer support

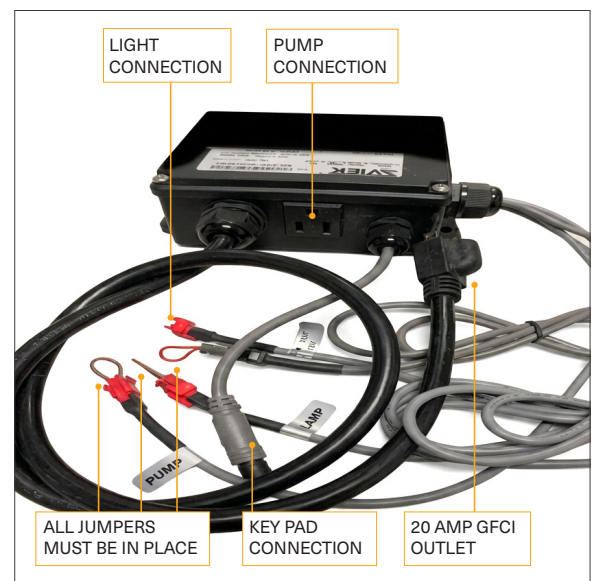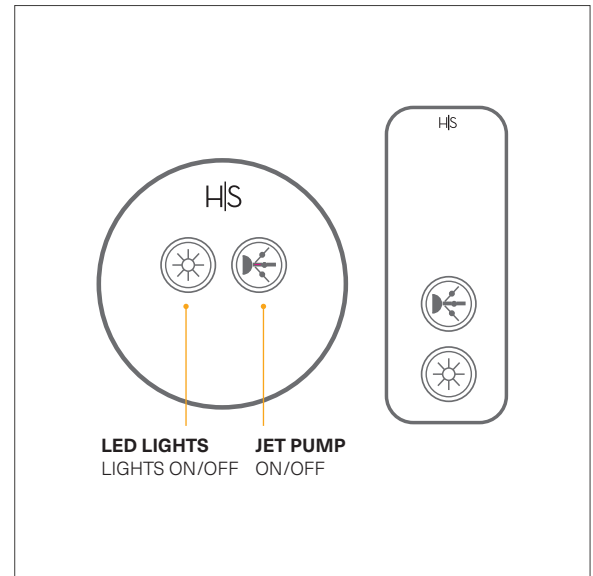

HYDRO SYSTEMS

Headquarters
29132 Avenue Paine
Valencia, CA 91355

Manufacturing Facility
385 Highway 155 South
McDonough, GA 30253

Technical Support
support@hydrosystem.com

Orders Department
orders@hydrosystem.com

General Information
info@hydrosystem.com

Phone: 661-775-0686
Website: hydrosystem.com

