


# Freestanding Tub with Indulge

## — INSTALLATION GUIDE —

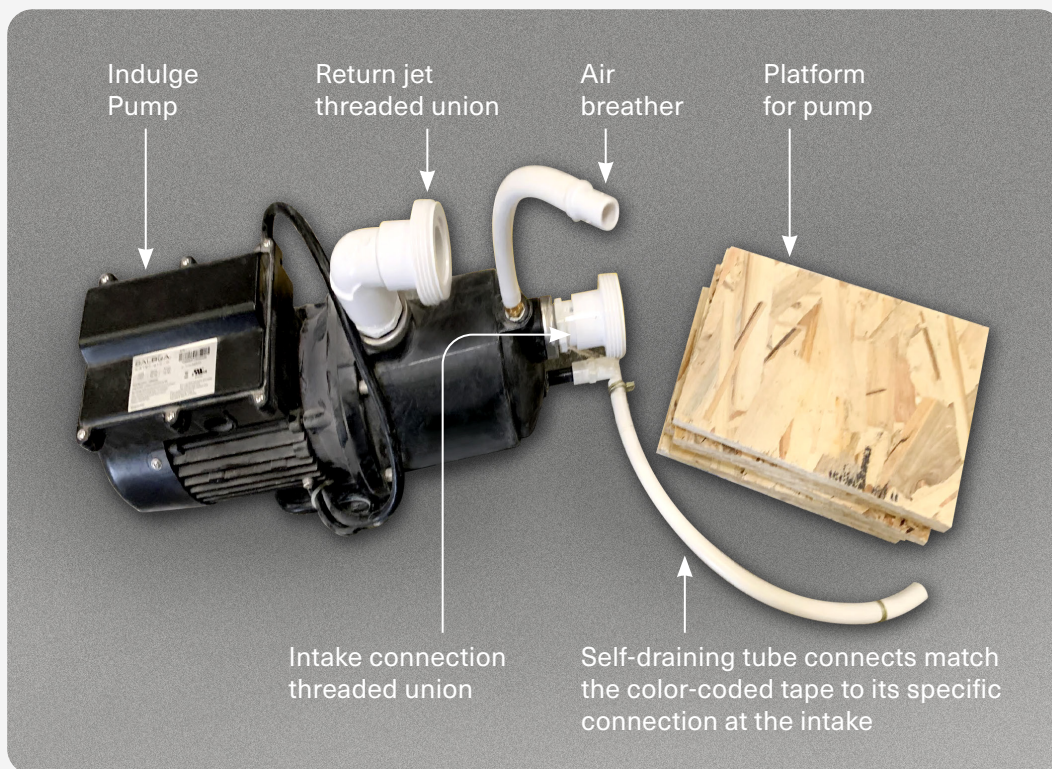

### ITEMS INCLUDED


- Indulge Pump
- Platform (support block) to place pump at the correct height
- Pipes and connectors
- Control Box

### SPECIFICATIONS

- **Pump size:** 19"L x 12½"H x 7"W.
- **Electrical Requirements:** Requires a 120v dedicated 15amp GFCI receptacle circuit.
- **Towers:** A 36" to 38" tower can be used to cover the Indulge Pump to give it a clean look.
- **Location:** This pump cannot be remote located; it must be placed within the tub itself.

## PLUMBING

- **Intake** with ball with O-rings
- **Return jet** with O-rings
- **Ball valve:** do not adjust (factory adjusted)
- **Self-drain connection** from pump (3/8" tubing)

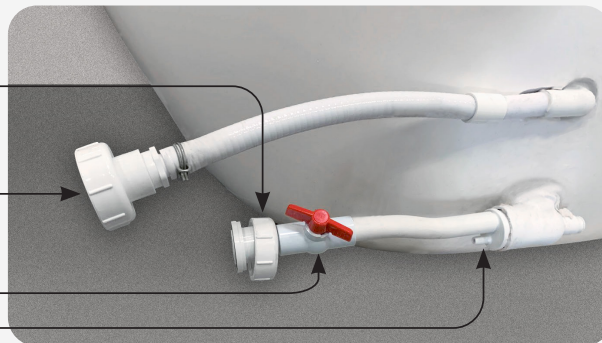

## INDULGE PUMP

Place **Indulge Pump** on top of wood platform (supplied).



**Air breather tubing** with check valve must be straight up (you can zip-tie it to the union connection).

**Connect the self-drain 3/8" tube** to the intake pipe and secure with the clamp provided.

**Install both unions** once pump is leveled to the correct height, making sure the O-rings are in place before fitting the connection to prevent from leaking.

## CONTROL BOX

- **Connect the power plug** from the pump into the control box
- **Keypad connection.** Make sure the red cable is to the left of the box
- **Make sure Shunt is attached**, if low water protection is not ordered

