


## **The 4-Button C5 System:**

### **Control Features:**

- Pump ON/OFF with water sensor control
- Pillow control ON/OFF
- Pillow control speed buttons (3 speeds)
- Automatic 30-minute run-timer for pump

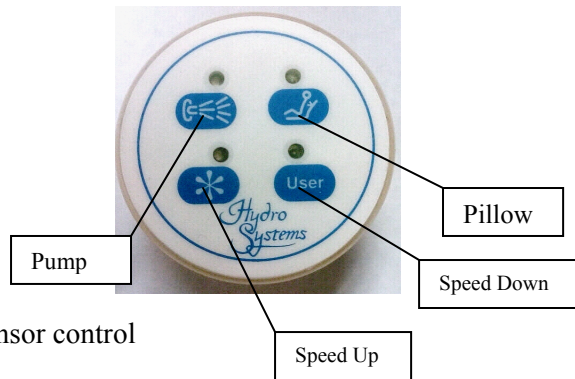

### **Single Speed Pump Motor Operation:**

Once the system run-timer has been programmed, the pump is available for activation. Press button 1 to turn the pump ON and press button 1 again to turn the pump OFF.

### **Pillow Operation Using the Speed Up/Down Keys:**

The pump must first be active in order to have control of the pillow operations. A press and release of the pillow button turns the pillows full ON and full OFF. Once the pillows are operating a press and hold of the pillow button for 2-seconds will illuminate the speed Up/Down button LEDs. Once the LEDs are illuminated, the speed buttons can be pressed to select from the 3 pillow speeds. The button LEDs will remain on for ten seconds of absent button pressing.

### **The Automatic 30-Minute Run-Timer:**

Once the system motor has been activated, an automatic timer is set to 30-minutes. The system will stay in operation until the run-timer expires, at which time all functions will shut down. The light device timer runs independent of the main system run-timer.