


The 4-Button C6 System:

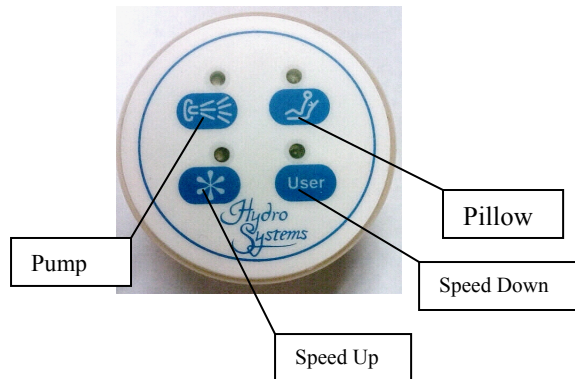

Control Features:

- Pillow control ON/OFF
- Pillow control speed buttons (3 speeds)
- Automatic 30-minute run-timer for pump
- Variable Speed Pump using speed up/down buttons with Wave mode and water sensor control

Variable Speed Pump Operation using the +/- keys:

Once the pump has been turned on, a press and hold of button 1 will illuminate the lower 2 LEDs of the display indicating that the speed Up/Down buttons are available for speed adjustment. The buttons will stay illuminated for 10 seconds of no button pressing. A press and release of the button 1 will shut the motor down. To enter the 'Wave' mode, press and hold the speed down button (once speed control is gained) until the button LED blinks to indicate the Wave mode has been entered.

Pillow Operation Using the Speed Up/Down Keys:

The pump must first be active in order to have control of the pillow operations. A press and release of the pillow button turns the pillows full ON and full OFF. Once the pillows are operating a press and hold of the pillow button for 2-seconds will illuminate the speed Up/Down button LEDs. Once the LEDs are illuminated, the speed buttons can be pressed to select from the 3 pillow speeds. The button LEDs will remain on for ten seconds of absent button pressing.

The Automatic 30-Minute Run-Timer:

Once the system motor has been activated, an automatic timer is set to 30-minutes. The system will stay in operation until the run-timer expires, at which time all functions will shut down. The light device timer runs independent of the main system run-timer.

