
# The 2-Button C8 System:

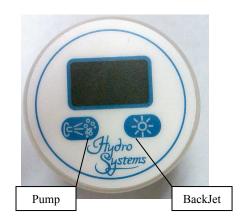

## **Control Features:**

- Programmable run-timer
- Pump ON/OFF with water sensor
- 7-Segment digital water temperature display
- High water scalding alarm
- Back Jet Massage Mode

#### The Programmable System Run-Timer:

In order to run the pump operation, the run-timer must be programmed by pressing button 1. If button 1 is pressed and held, the timer will scroll through the programmable times. Release the button on the desired amount of run-time. The maximum programmable time is 30-minutes. If the light device is on when the main run-timer is programmed and the light time remaining is less than the programmed run-time, the light will remain on until the system run-timer expires.

#### **Single Speed Pump Operation:**

Once the system run-timer has been programmed, the pump is available for activation. Press button 1 to turn the pump ON and press button 1 again to turn the pump OFF. Once the pump has been turned off, the timer countdown will discontinue and the display will return to standby mode.

### **Digital Water Temperature Display:**

Once the system detects the presence of water, the digital display will show the temperature of the water. This indicates the pump motor is available for activation.

#### **High Water Scalding Alarm Feature:**

If the temperature of the detected water exceeds 111 degrees Fahrenheit, 'too' 'hot' will flash on the digital display. All function activation except the light device will be prohibited. If the over-temperature is detected while a motor is functioning, then the motor operation will be automatically shut down. Once the temperature no longer exceeds the high limit, the system will allow the run-timer to be re-programmed.

#### The Back Jet Massage Mode Feature:

The system pump motor must first be operational for the back jet feature to operate. Once the pump is active, the back jet massage can be cycled through various stages of operation; full on stage, fast speed stage, medium speed stage, and slow speed stage. The first press selects the full on stage, second press selects the fast speed, third press selects the medium speed, fourth press selects the slow speed, and the fifth press shuts the back jet massage off.

